

# Index

---

## A

Alarm ..... 2-2, 3-3, 3-8, A-2  
Auto RAID Setup 1-8, 2-7, 2-8, 3-5,  
3-9, 4-4, 5-8, 5-9

---

## B

block striping ..... 1-3, 1-5  
block striping with dedicated parity  
..... 1-5  
buttons..... 2-8, 3-1, 4-5, 4-6

---

## C

controller 1-1, 1-5, 1-7, 1-8, 2-1, 2-2,  
2-7, 2-8, 3-1, 3-2, 3-4, 3-5, 3-6, 3-  
7, 3-9, 3-10, 3-11, 3-12, 3-13, 3-  
14, 3-17, 3-19, 3-20, 3-21, 4-1, 4-  
2, 4-4, 4-5, 5-1, 5-2, 5-7, 5-8, 5-9,  
6-3, 6-4, 6-5, 6-6, A-3, A-4, A-6  
controls..... 1-8, 2-1, 3-1

---

## D

data storage .... 1-1, 3-14, A-3, A-4  
dedicated parity ..... 1-5  
disk failure..... 1-1, 1-2, 1-3  
disk mirroring..... 1-3  
disk spanning ..... 1-2  
drive bays ... 1-7, 2-1, 2-2, 2-5, A-1

---

## E

enclosure 1-1, 1-7, 1-8, 2-1, 2-2, 2-5,  
3-2, 3-3, 3-16, 3-17, 3-19, 5-2, 5-  
3, 5-4, 5-5

expansion 1-4, 2-5, 3-5, 3-9, 3-20, 4-  
6, 5-8, A-1

---

## F

fans 1-1, 1-7, 1-8, 2-1, 2-2, 3-2, 3-  
14, 3-16, 3-17, 5-2, 5-3, 5-4, 5-7,  
A-2  
firmware 1-8, 3-5, 3-11, 3-12, 3-13,  
4-1, 4-5, 6-3, 6-4, 6-5, 6-6, A-6

---

## G

GUI manager..... 3-4

---

## H

hard drives 1-1, 1-7, 2-4, 2-7, 2-8, 3-  
2, 3-9, 3-14, 5-8, 5-9, A-3, A-5  
HBA..... 2-3, 3-3, 6-2, A-3  
host 1-1, 1-8, 2-3, 2-8, 2-9, 3-3, 3-4,  
3-5, 3-6, 3-8, 3-13, 3-14, 3-19, 3-  
20, 5-3, 5-5, 5-6, 5-8, 6-2  
hot-swap..... 3-14, A-1

---

## I

IDE hard drives..... 1-1, 2-4  
In-band SCSI ..... 3-5, 3-6  
indicators..... 2-1  
installation 1-8, 2-2, 2-4, 2-9, 2-12,  
2-18  
interface ..... 3-13, A-3, A-4

---

## J

Java 2-3, 2-9, 2-18, 2-19, 6-2, A-4,  
A-6

JRE.....2-9, A-4, A-6

---

## ***L***

LCD control panel .....1-8, A-2  
LED indicators .....5-2, A-2

---

## ***M***

management software 2-3, 3-8, 6-2,  
A-3  
memory .....1-8, A-1  
multiple-block striping with  
distributed parity.....1-6  
mute button .....2-2, 3-1, 3-8

---

## ***P***

parity .....1-5, 1-6, 4-4, 4-5, A-4  
power cable .....2-5, 3-19, 5-4  
power supplies 1-1, 1-7, 1-8, 2-1, 2-  
2, 3-2, 3-3, 3-14, 3-19, 5-2, 5-3, 5-  
5, 5-7, A-2  
PowerPC 603e 100MHz CPU..1-8  
program updates.....2-19

---

## ***R***

RAID 1-1, 1-2, 1-3, 1-4, 1-5, 1-6, 1-  
7, 1-8, 2-1, 2-3, 2-4, 2-5, 2-7, 2-8,  
2-12, 3-1, 3-2, 3-3, 3-4, 3-5, 3-6,  
3-8, 3-9, 3-10, 3-11, 3-14, 3-16, 3-  
17, 3-19, 3-20, 4-1, 4-2, 4-4, 4-5,

4-6, 5-1, 5-6, 5-7, 5-8, 5-9, 6-2, 6-  
3, 6-5, A-1, A-3, A-4, A-5

RAID 0 .....1-1, 1-3, 1-4  
RAID 0 ~ 5. ....1-1  
RAID 1 .....1-3, 1-4, 1-5, 5-8  
RAID 1(0+1).....1-4  
RAID 3 .....1-5, 1-6  
RAID 5 .....1-6  
RAID levels 1-1, 1-4, 1-5, 1-7, 1-8,  
2-5, 3-9, 5-8  
RAIDGuide 1-8, 2-3, 2-8, 2-9, 2-11,  
2-12, 2-18, 3-3, 3-4, 3-5, 3-7, 3-8,  
3-9, 3-13, 3-20, 3-21, 4-5, 5-1, 5-  
2, 5-3, 5-4, 5-8, 6-2, A-2, A-6  
Rebuilding .....3-21  
redundancy 1-2, 1-3, 1-4, 1-6, 3-14  
RS-232 2-3, 3-5, 3-13, 3-14, 6-3, A-  
2, A-4

---

## ***S***

SCSI ports.....2-3, 3-4, 6-2  
serial port .....3-13, A-2  
software 2-9, 3-4, 3-14, 3-19, 5-2, 5-  
3, A-1, A-2, A-6  
spares .....3-20, 4-2, 4-6, A-5

---

## ***T***

termination.....2-3, 5-6  
trays 1-7, 1-8, 2-1, 2-4, 5-2, 5-5, A-1

---

## ***U***

Uninstalling .....A-6

